




# Bose SoundTouch Portable Speaker Replacement

Replace speakers for your Bose SoundTouch Portable.

Written By: Chelsea Martin

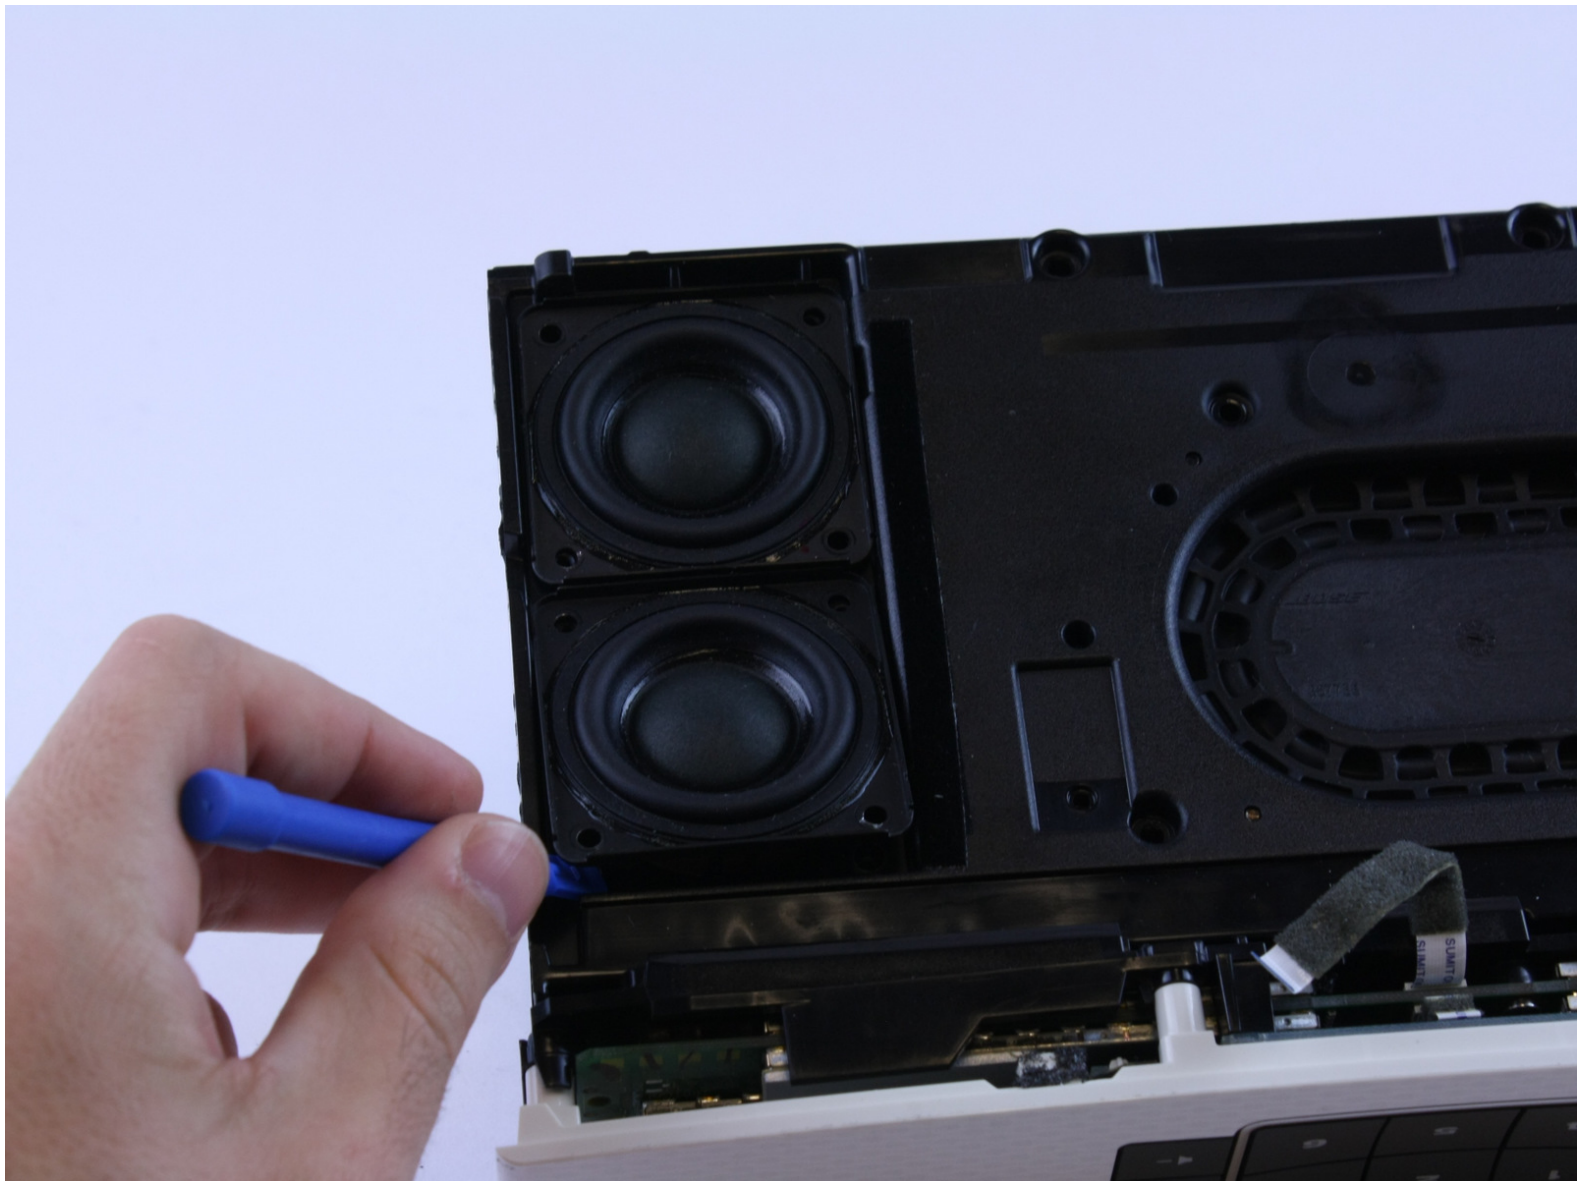

## INTRODUCTION

This tutorial requires removal of the front grille and back cover to access the speakers.

---



### TOOLS:

- [T10 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Small Needle Nose Pliers](#) (1)
-

## Step 1 — Speaker Battery



- Remove the two T-10 machine screws at the bottom of the device.

## Step 2



- Turn the device around.
- From the top, lightly push down the back cover to release it.
- Lift the bottom of the cover and pull it up.

## Step 3



- Remove the two T-10 machine screws, then pull the battery straight out.

## Step 4 — Grille



- Remove the two screws holding the speaker grille in place.



## Step 5



- Grip the sides of the device and push the speaker grille down and out.

## Step 6





- Gently release the ribbon from its connector and remove the grille.

## Step 7 — Speakers



- There are four T-10 Torx screws for each speaker; remove all four screws for each speaker you are replacing.

## Step 8

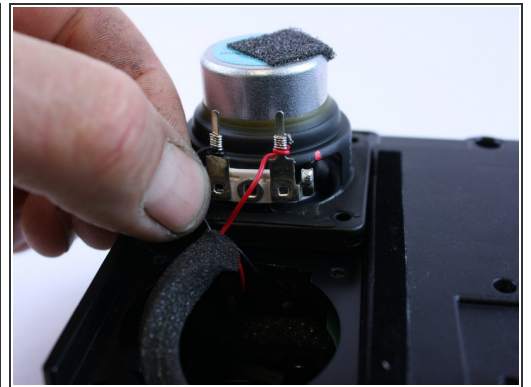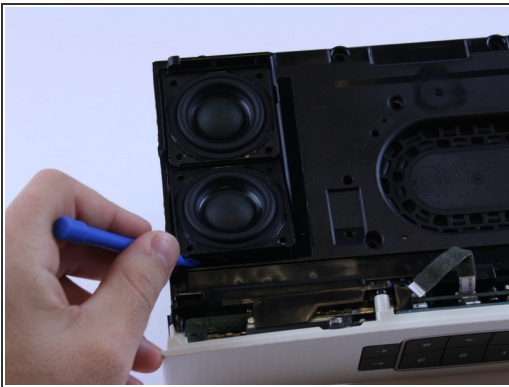

- Using a plastic pry tool, carefully pry the speaker up.
- With the bottom of the speaker exposed, unwind the wires from the connection tabs and replace the speaker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-09 01:21:24 PM.